

Recommended Installation Guide

Type of Screws Required



13mm Wafer Head Drywall screw



13mm Wafer Head Jack-point screw




25mm Countersunk cross head




40mm Countersunk cross head


Bracket installation

Double back box

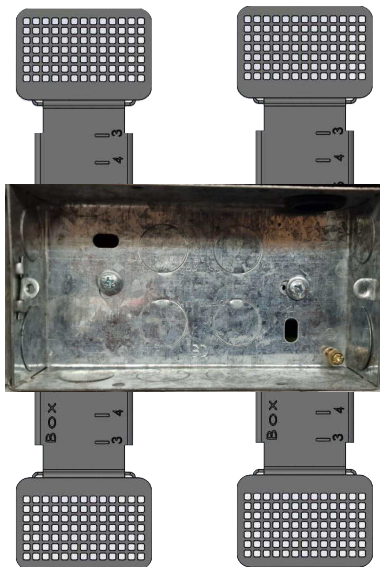



Single back box

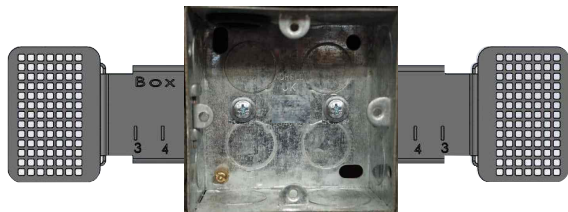


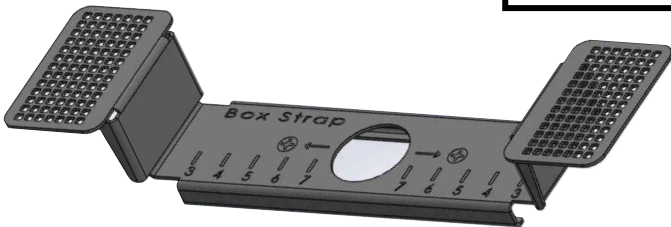

Bracket installation


Kitchen Grid 6g/8g

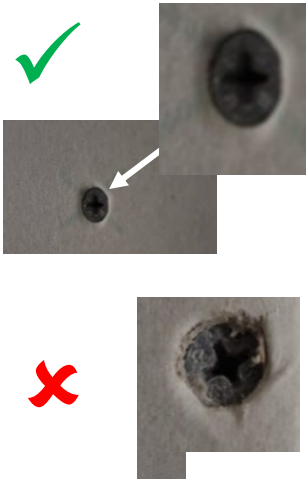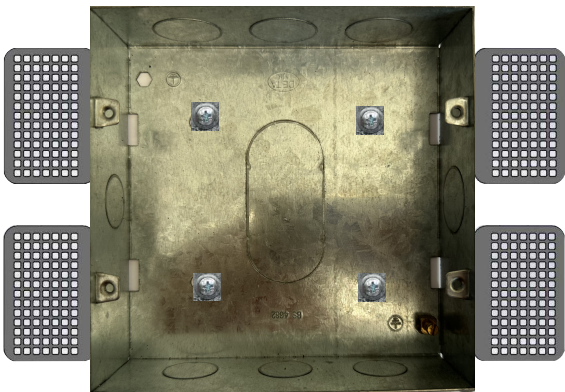

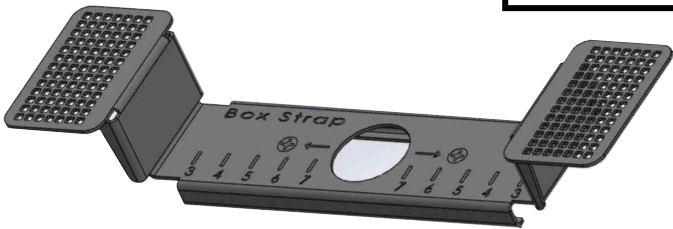


Recommended Installation Guide

Different Wall types at first fix stage


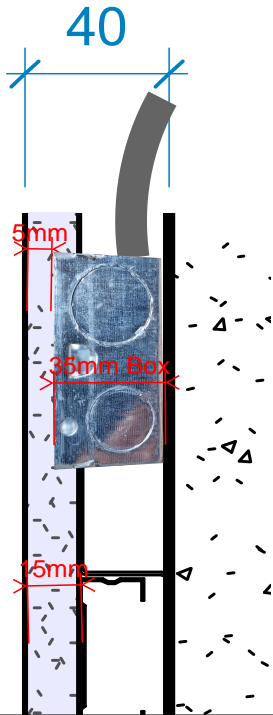


Gyp-liner wall

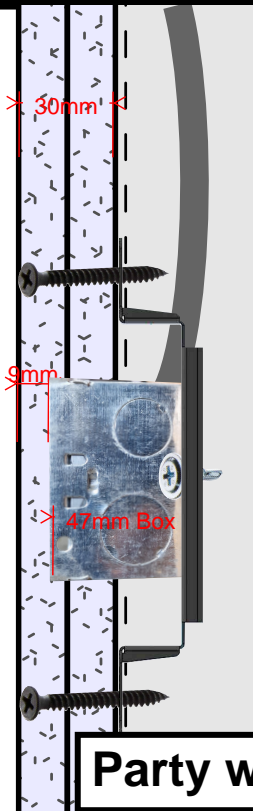


Party wall


Example of the screw head fixing

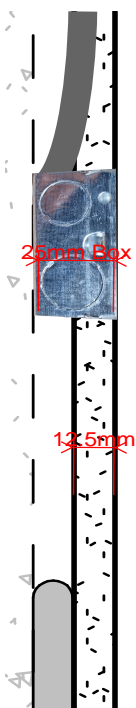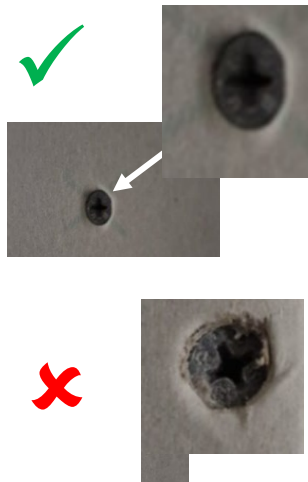


Dot and dab wall

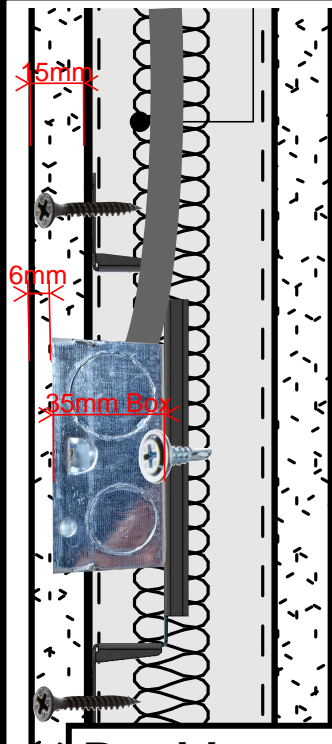

Partition wall

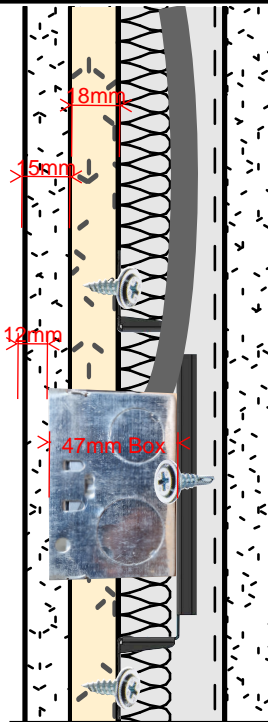


partition wall+ply

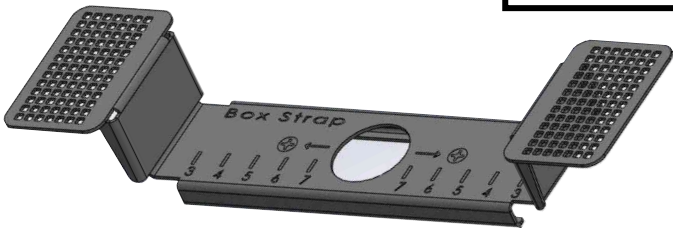


Recommended Installation Guide

Different Wall types at Mid fix stage when both sides of the wall are closed

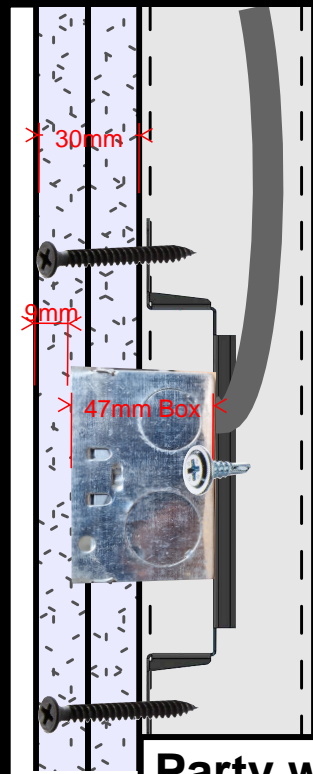


Party wall

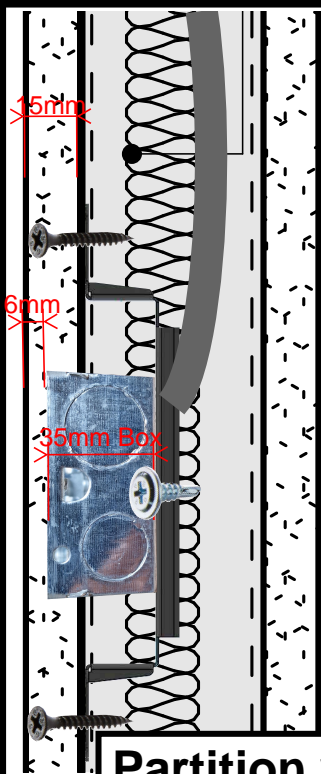


Partition wall

During the return visit to cut out the down-lights and complete back box installation, it is recommended to bring the cables through the back of the box.


Refer to the Project incorporation document for a more comprehensive installation guide

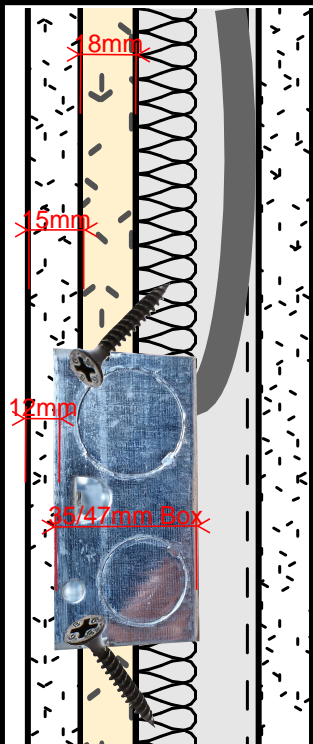

Partition wall+ply

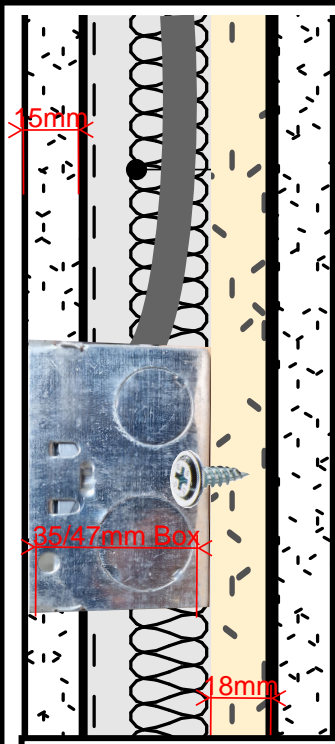

Partition wall+ply

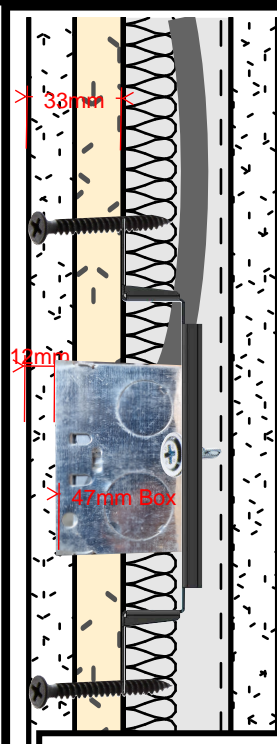

Partition wall+ply